

How to Change the Gain on the Sennheiser EW-D SK

1. **Power On the Body Pack:**
 - Press the **Power** button on the body pack transmitter to turn it on. Ensure that both the transmitter and the receiver are powered on and paired.
2. **Access the Gain Menu:**
 - On the **receiver's display**, navigate to the **GAIN** menu item. You can do this by using the **Menu** or **Up/Down** buttons until you reach the Gain setting.
3. **Open the Gain Setting:**
 - Once you see **GAIN** flashing on the display, press the **SET** button to select this menu item. This will allow you to adjust the gain setting.
4. **Adjust the Gain Level:**
 - Use the **Up** or **Down** buttons on the receiver to increase or decrease the gain level as needed.
 - Monitor the **AF level indicator** on the display to ensure that the signal is neither too low nor overdriven.
 - You want to keep the audio level within a range where it is clear, without causing distortion. The **LINK LED** will flash yellow if the signal is too high.
5. **Save the Gain Setting:**
 - Once you have adjusted the gain to the desired level, press the **SET** button again to save your changes.
6. **Finalize and Exit:**
 - After saving your settings, you can exit the menu by pressing the **Menu** button to return to the main screen.